




SITESTORE® INSTALLATION INSTRUCTIONS





1- The chassis is placed on a flat surface.

Note: The base being level is paramount to the store going together seamlessly.

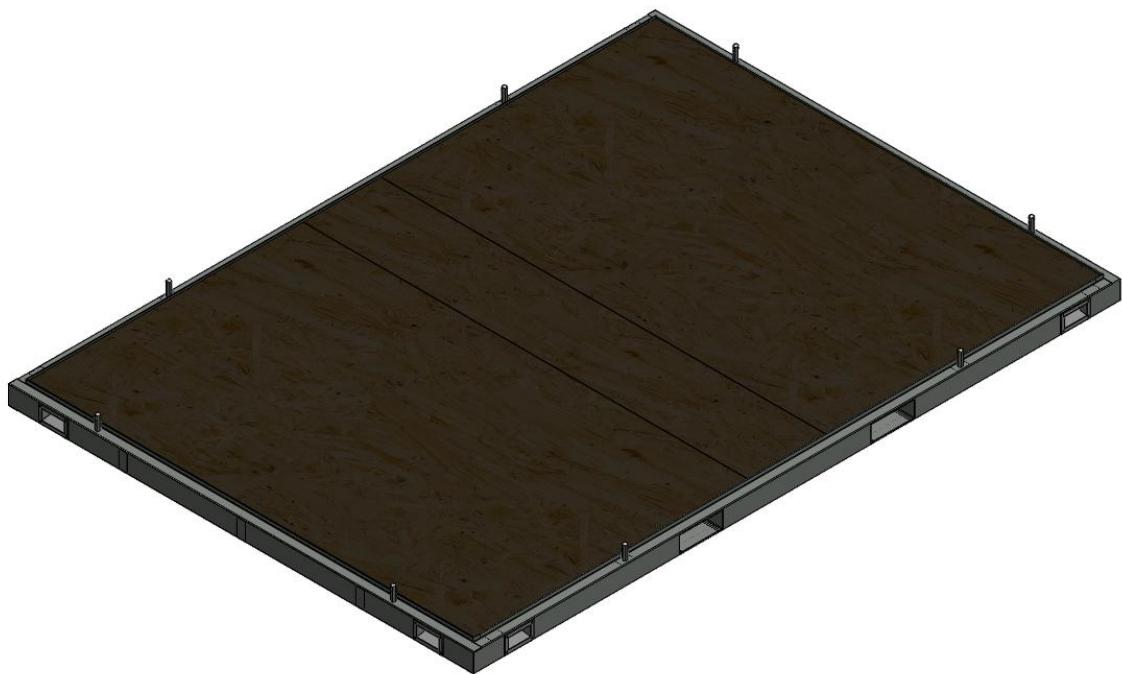


2- The panel is mounted onto the uprights and then secured with spring pins.


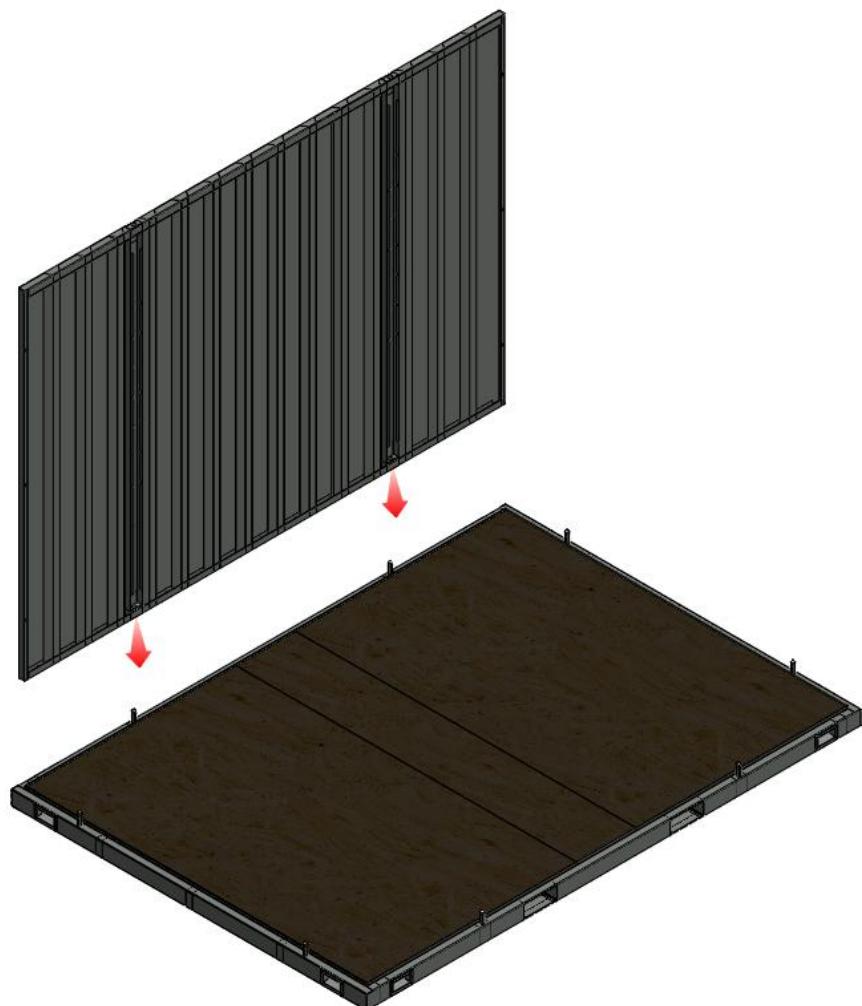


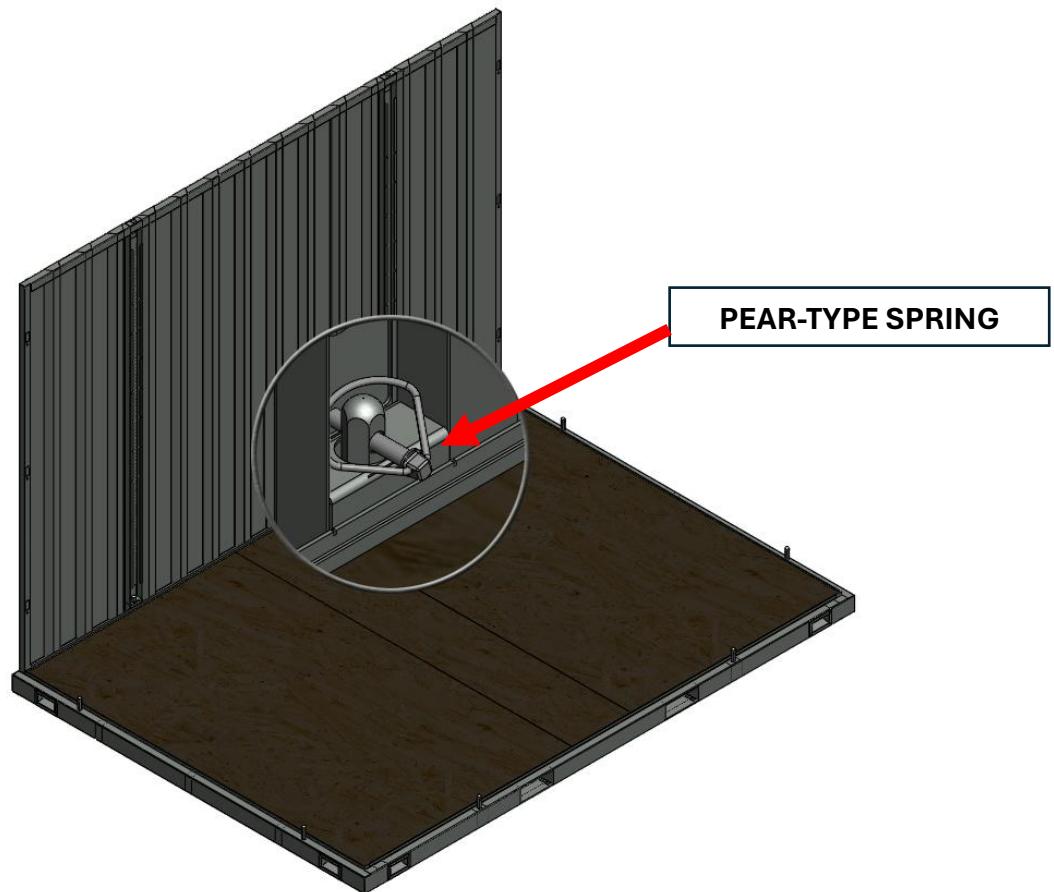

3- After the opposite side panel is mounted, it is secured with a spring pin.

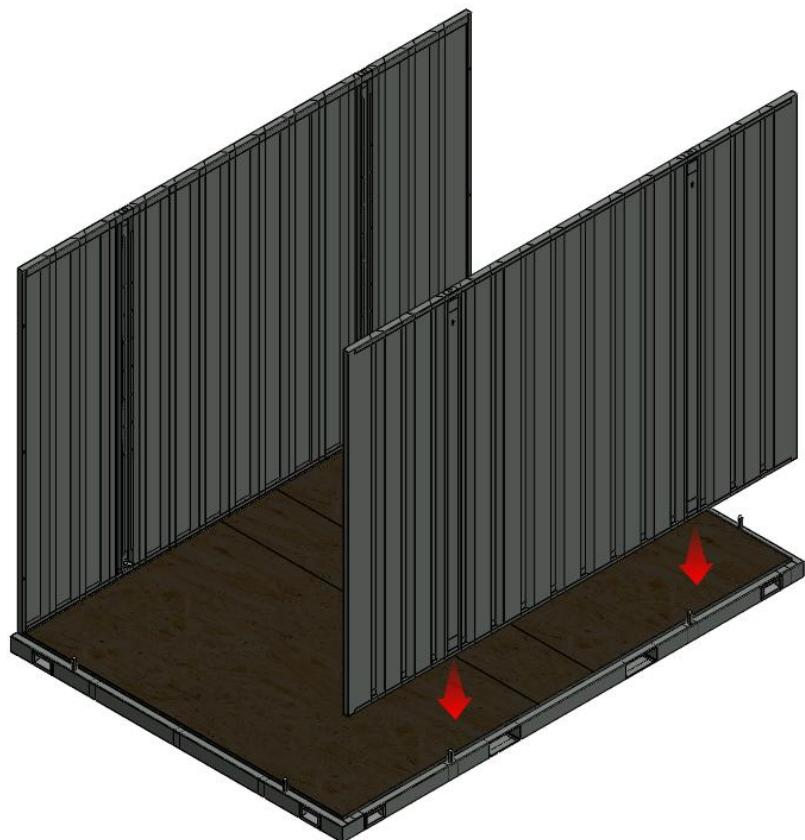


4- The front panel is installed and fixed to the chassis using a pear-type spring pin, and to the side panel using a D-type spring pin.

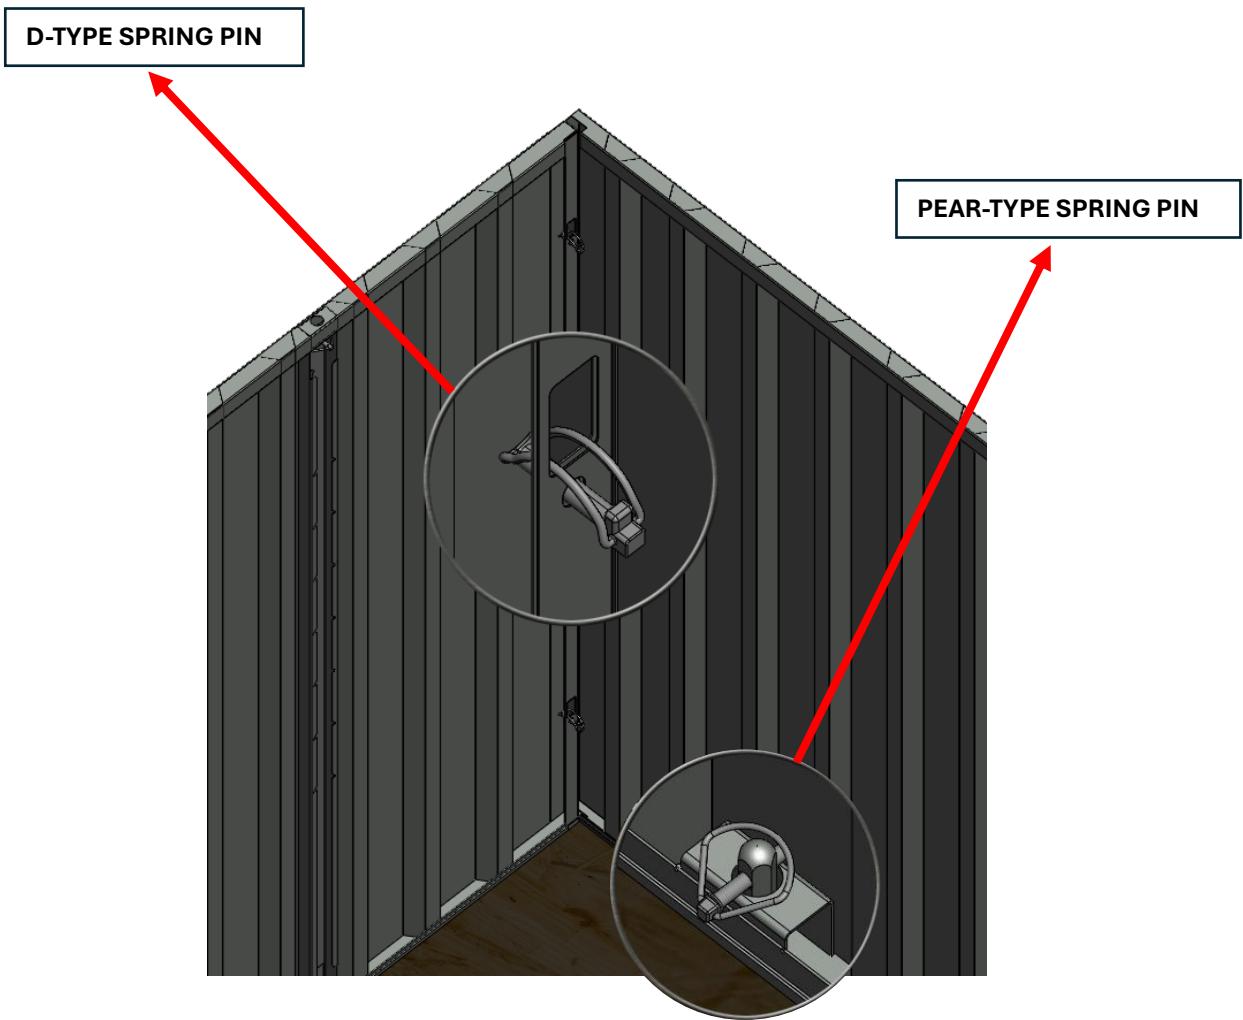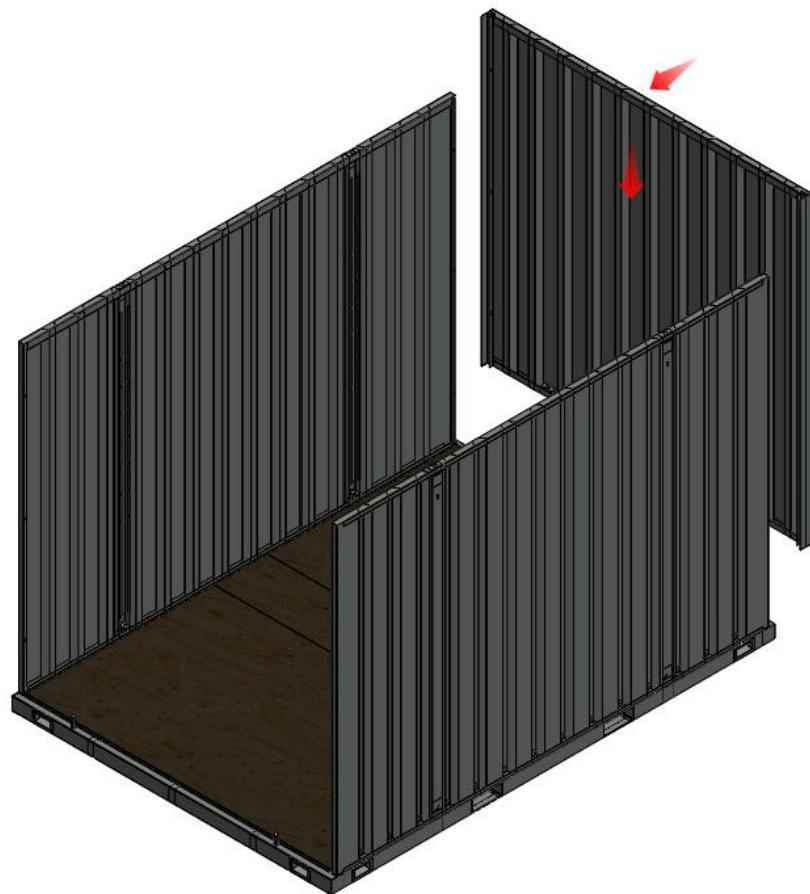

5- The door panel is mounted and fastened to the chassis using a pear-type spring pin, and to the side panel using a D-type spring pin.





6- The lifting lugs are installed on the ceiling.

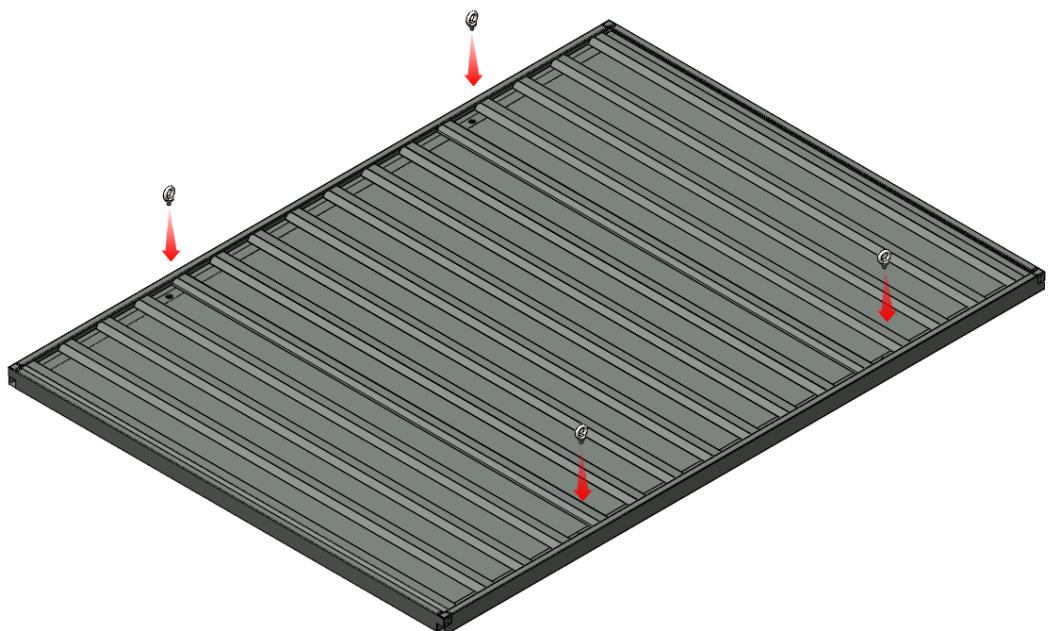

7- The roof panel is fastened to the adjacent panels with a pear-type spring pin.

**Note: SiteStore® 6m version may require additional manpower due to size and weight.
We recommend 4 people minimum.**

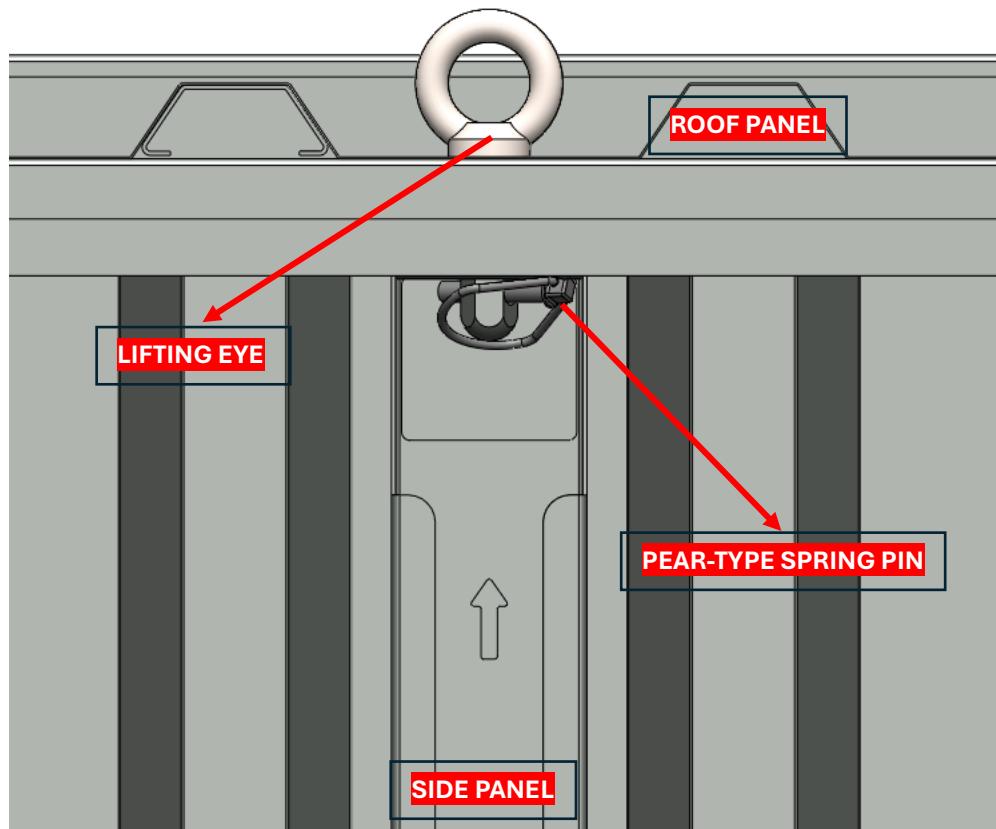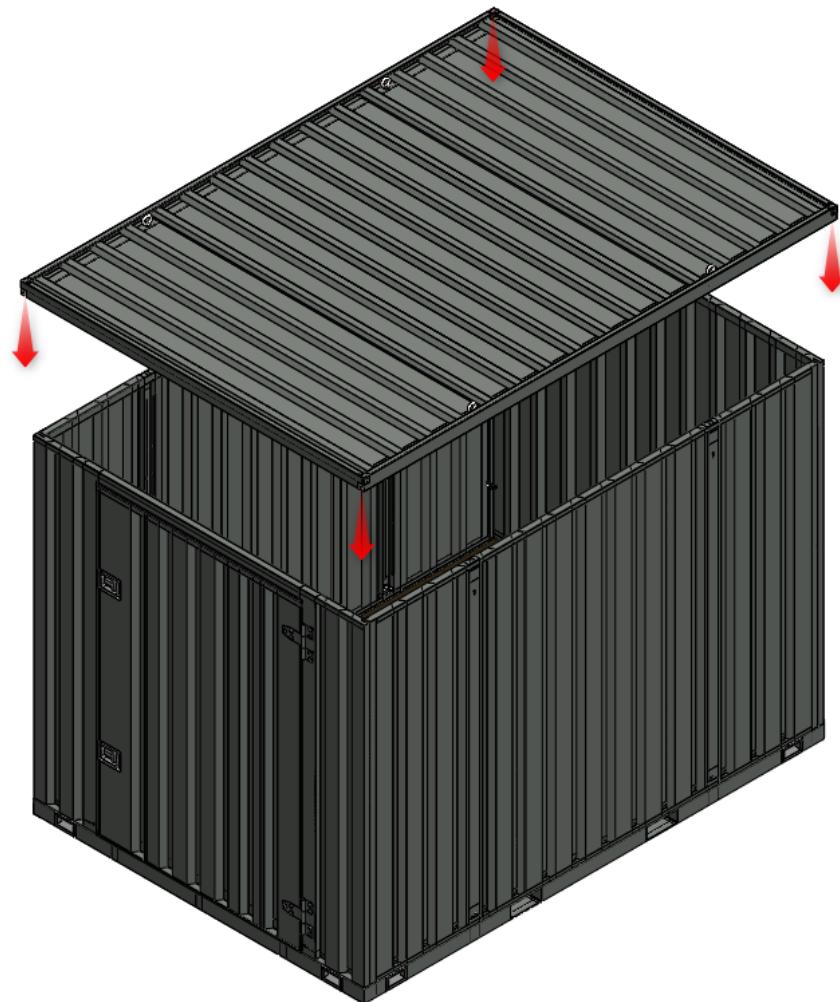

SOLMHA

SITESTORE®

